



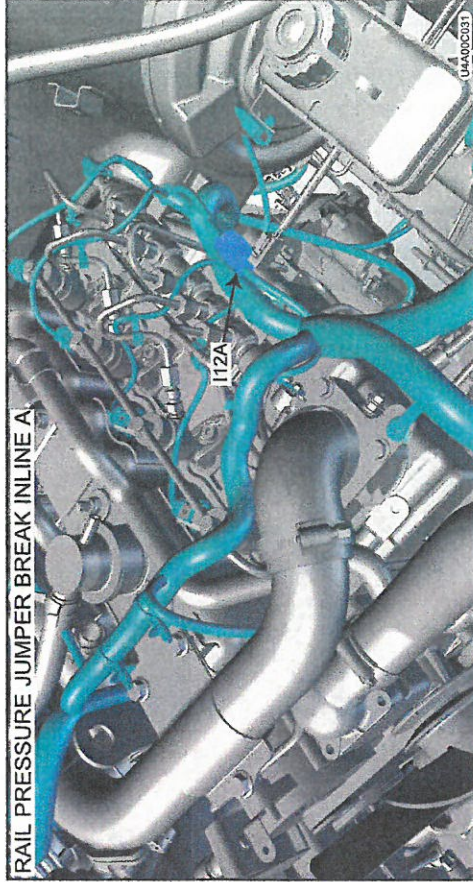
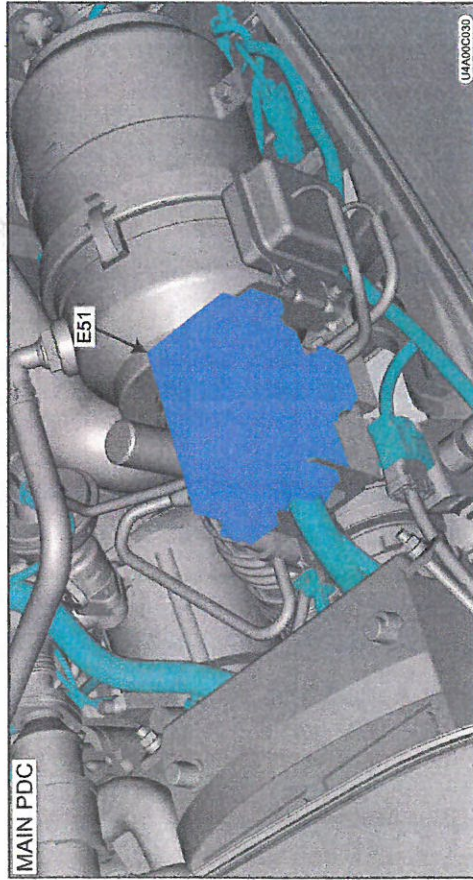
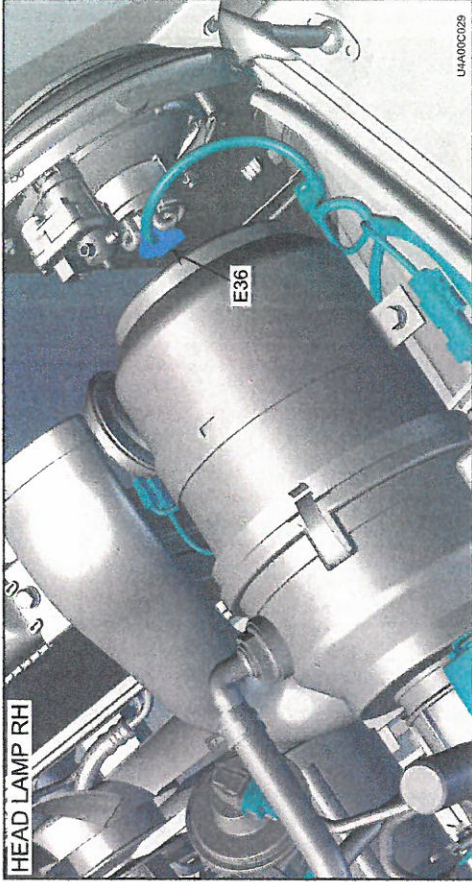
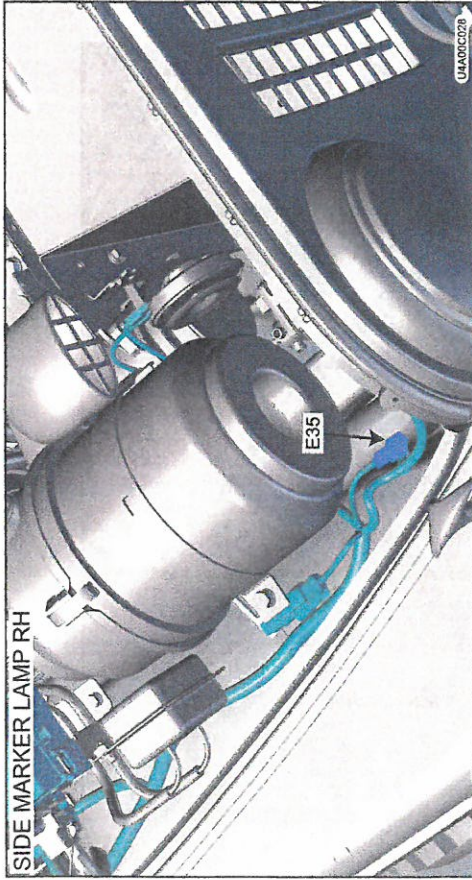


The repair methods given by the manufacturer in this document are based on the technical specifications, current at the time of release. The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which the vehicles are manufactured. The reproduction, translation, transmission, in part or of whole of the present document, are prohibited without the prior written consent of Mahindra & Mahindra Ltd. The use of this document by any person other than the trained personnel, at the Authorized Service Centre of Mahindra & Mahindra Ltd., will amount to unauthorized use and shall be liable for penalty/prosecution© 2018 Mahindra & Mahindra Ltd.


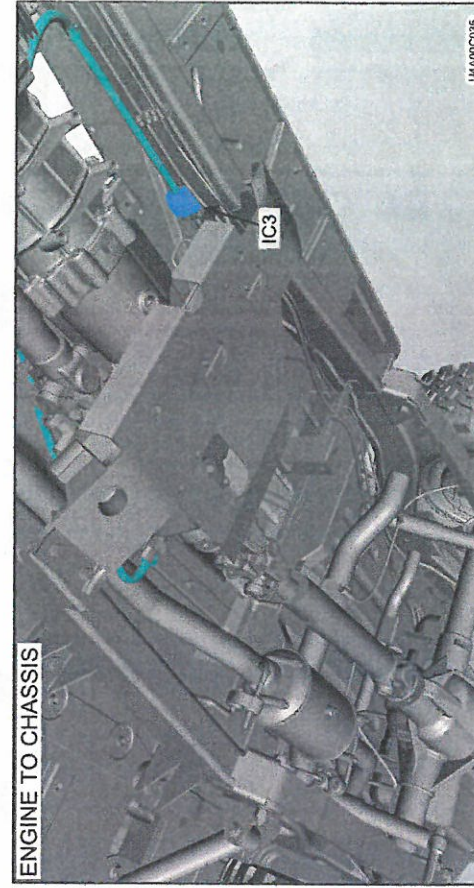


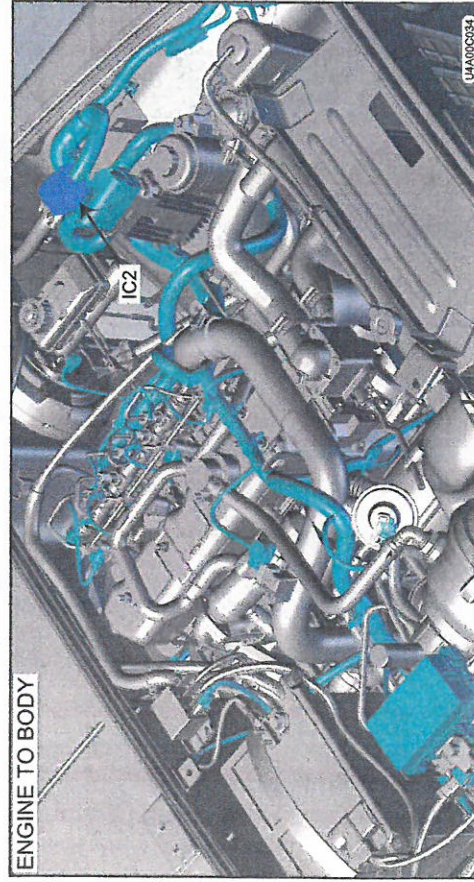












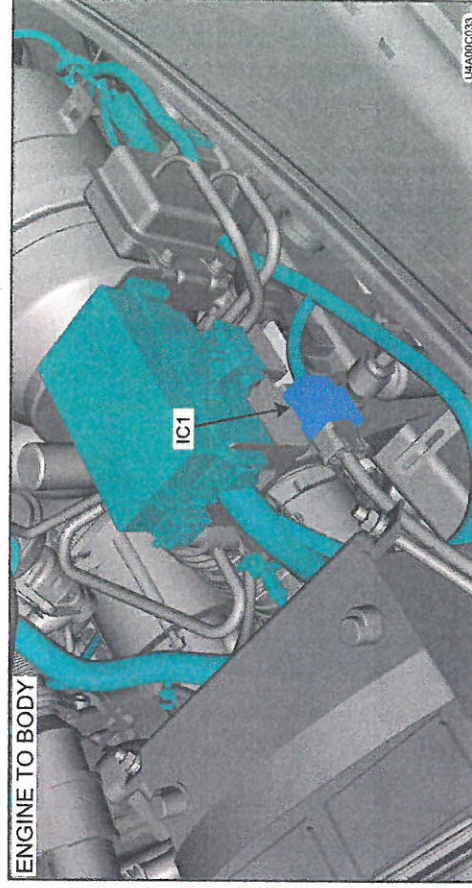


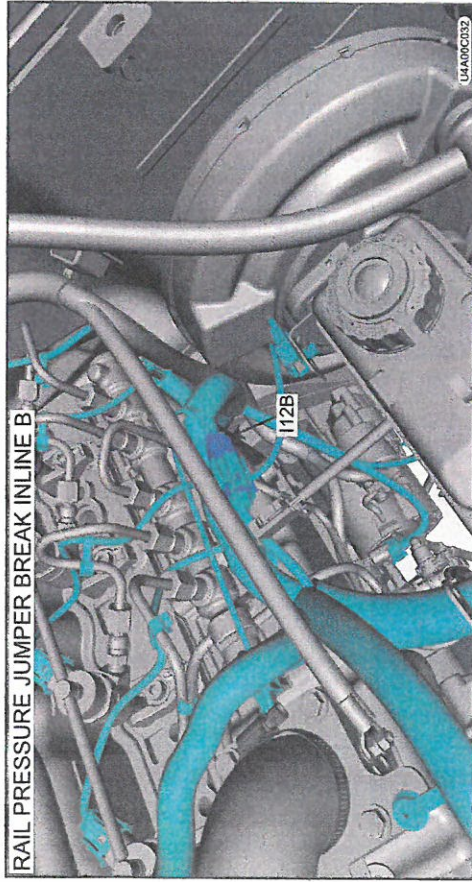















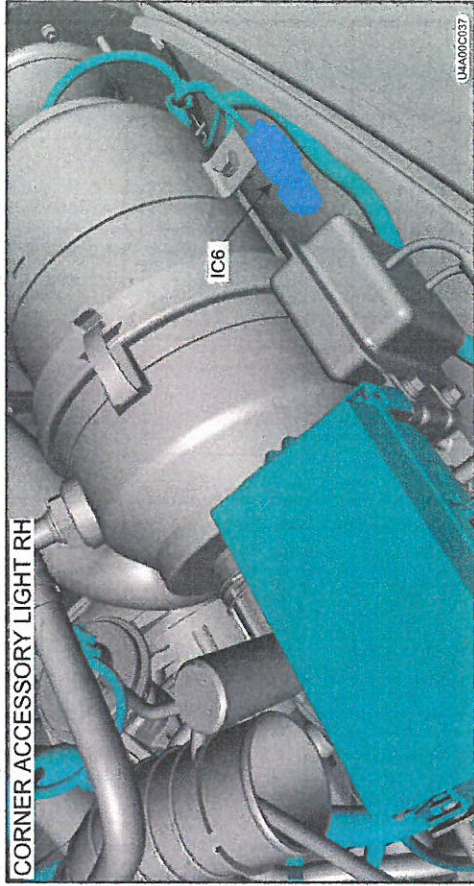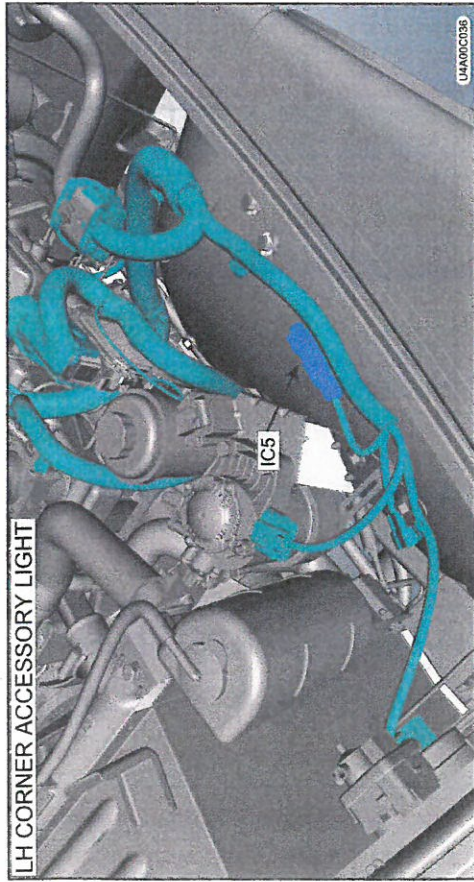

6.1.3 ENGINE WIRING HARNESS CONNECTOR FACE VIEW

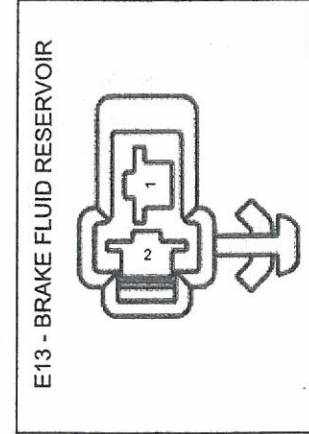
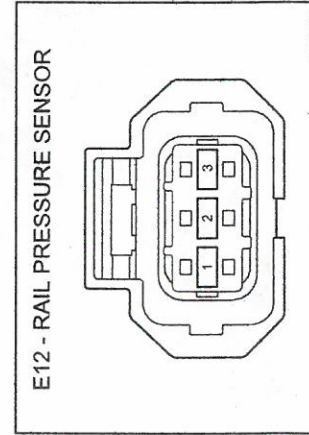
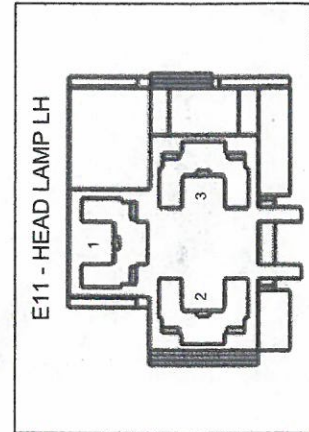
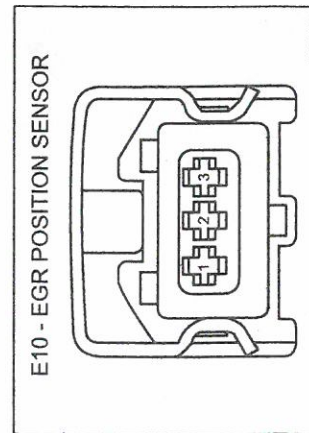
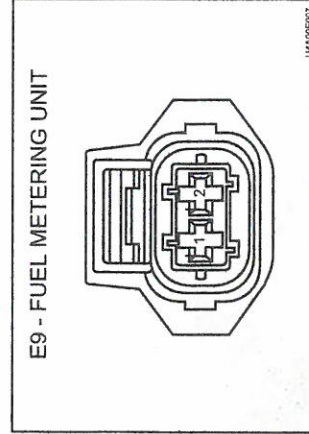
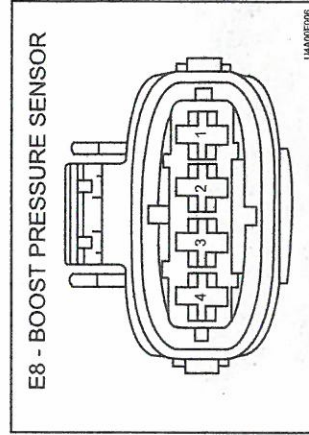
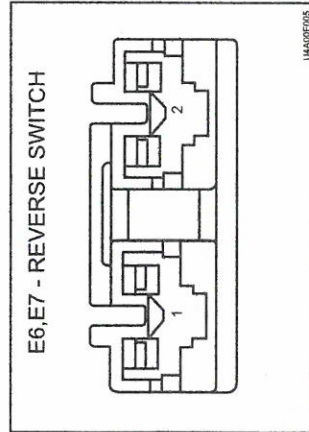
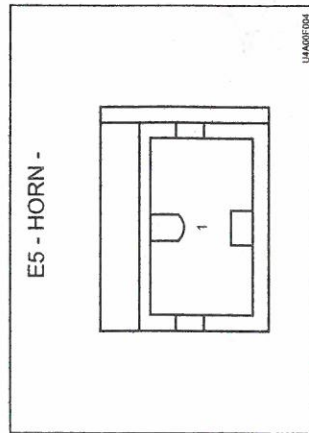
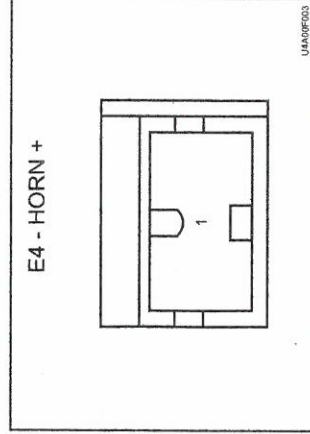
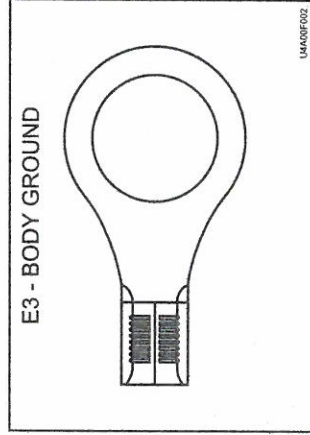
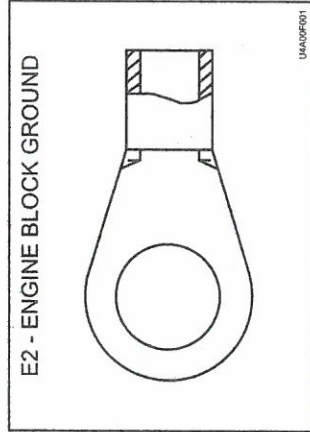
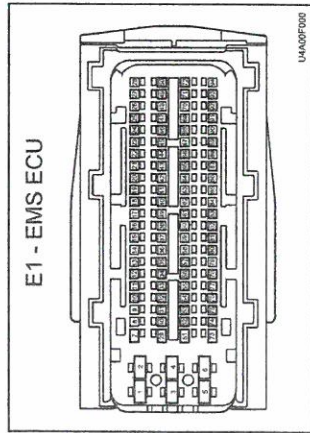




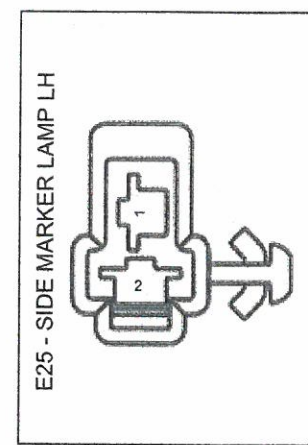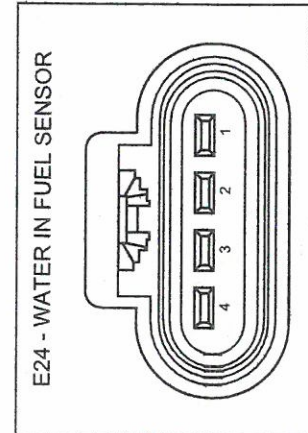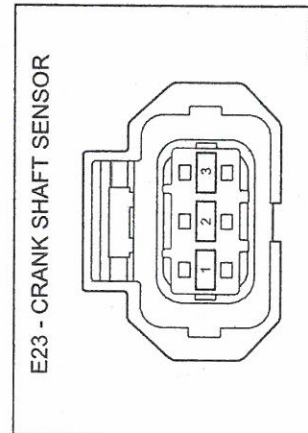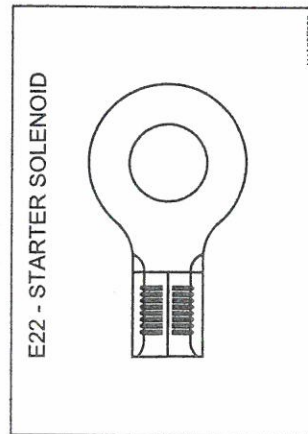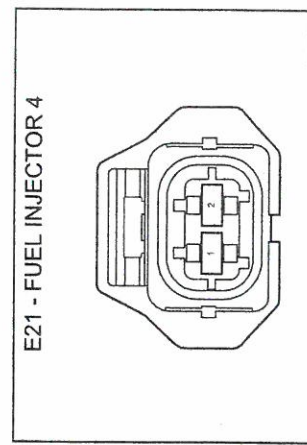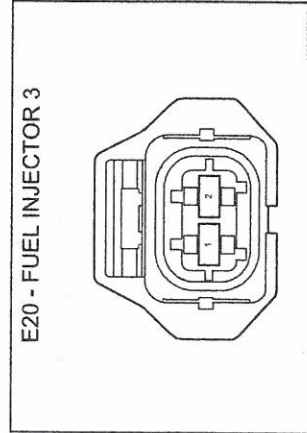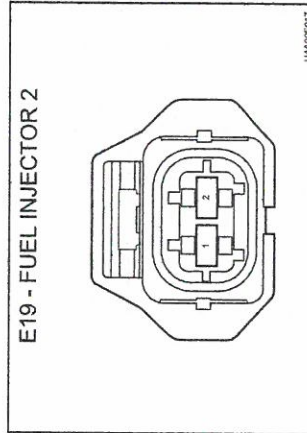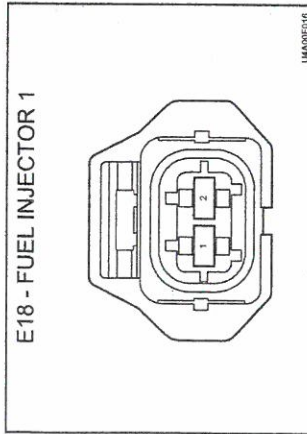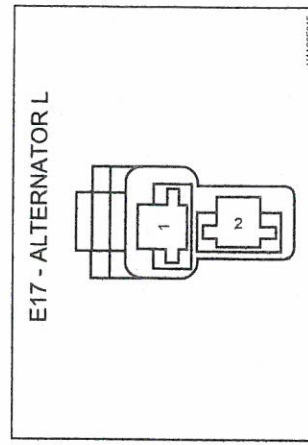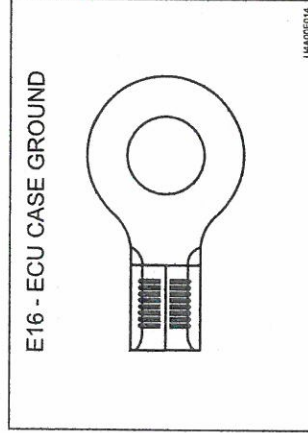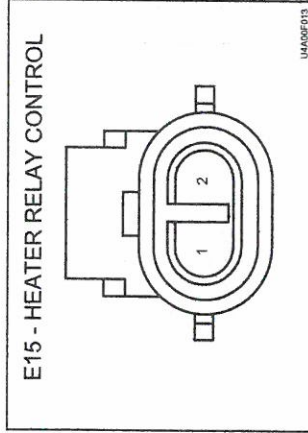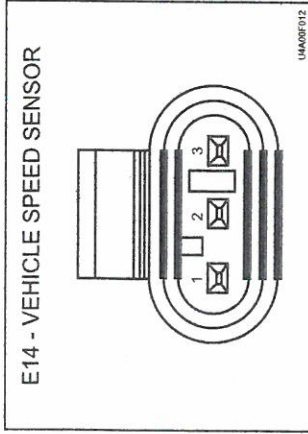

The repair methods given by the manufacturer in this document are based on the technical specifications, current at the time of release. The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which the vehicles are assembled. The use of this document by any person other than the trained personnel, at the Authorized Service Centre of Mahindra & Mahindra Ltd., will amount to unauthorized use and shall be liable for penalty/prosecution © 2018 Mahindra & Mahindra Ltd.




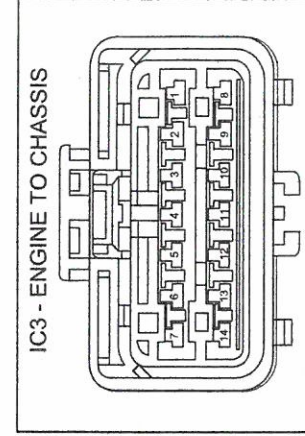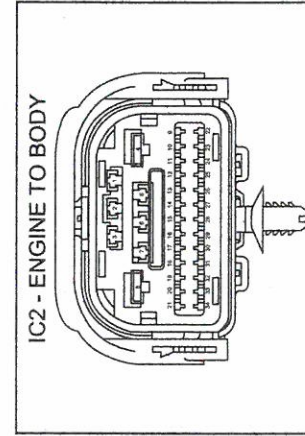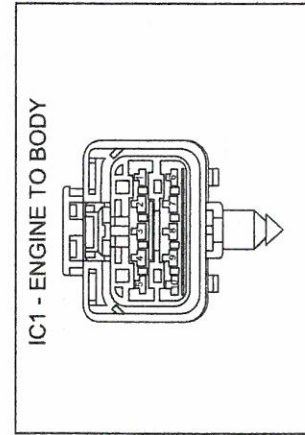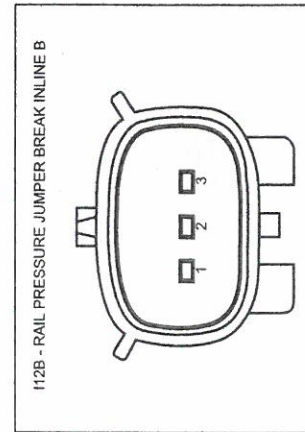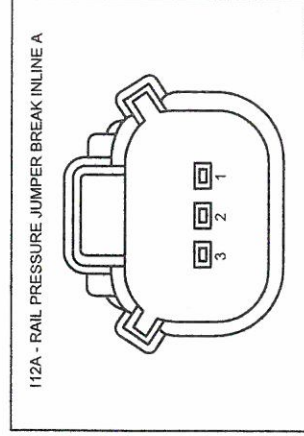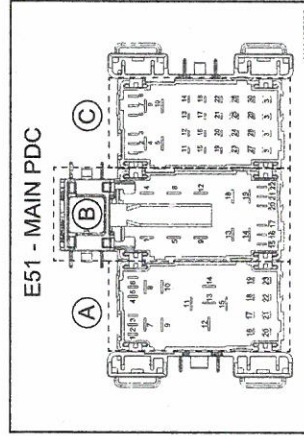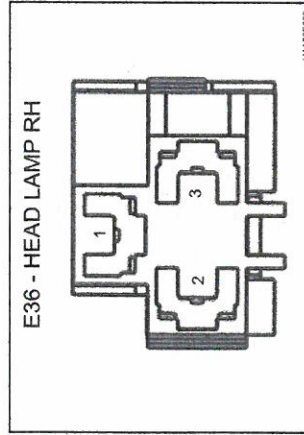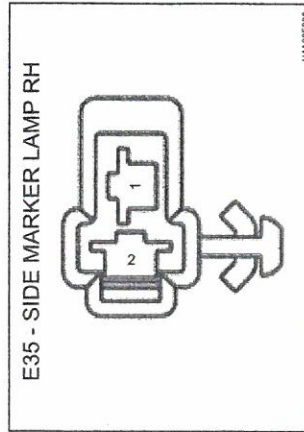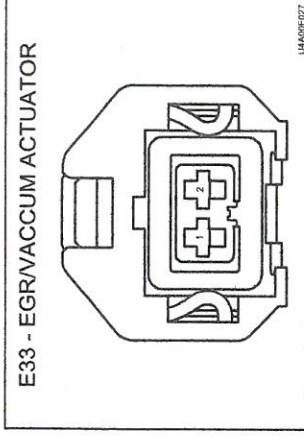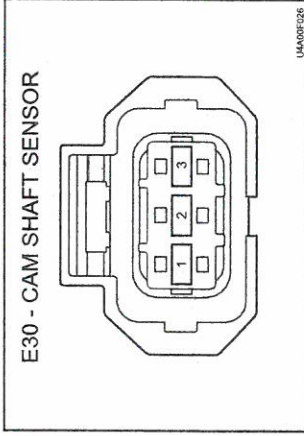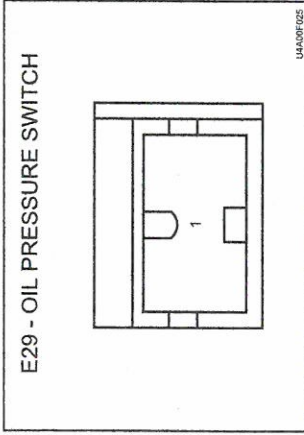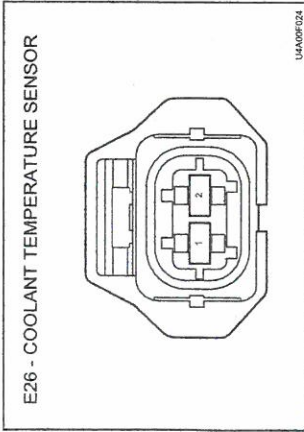

The repair methods given by the manufacturer in this document are based on the technical specifications, current at the time of release. The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which the vehicles are manufactured. The reproduction, translation, transmission, in part or whole of the present document, are prohibited without the prior written consent of Mahindra & Mahindra Ltd. The use of this document by any person other than the trained personnel, at the Authorized Service Centre of Mahindra & Mahindra Ltd., will amount to unauthorized use and shall be liable for penalty/prosecution © 2018 Mahindra & Mahindra Ltd.




IC5 - LH CORNER ACCESSORY LIGHTS

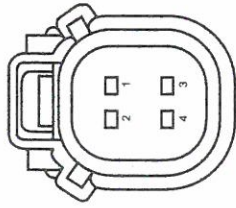

UAW010208


IC6 - RH CORNER ACCESSORY LIGHTS

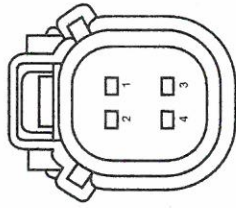

UAW009207



## 6.2 INSTRUMENT PANEL WIRING HARNESS

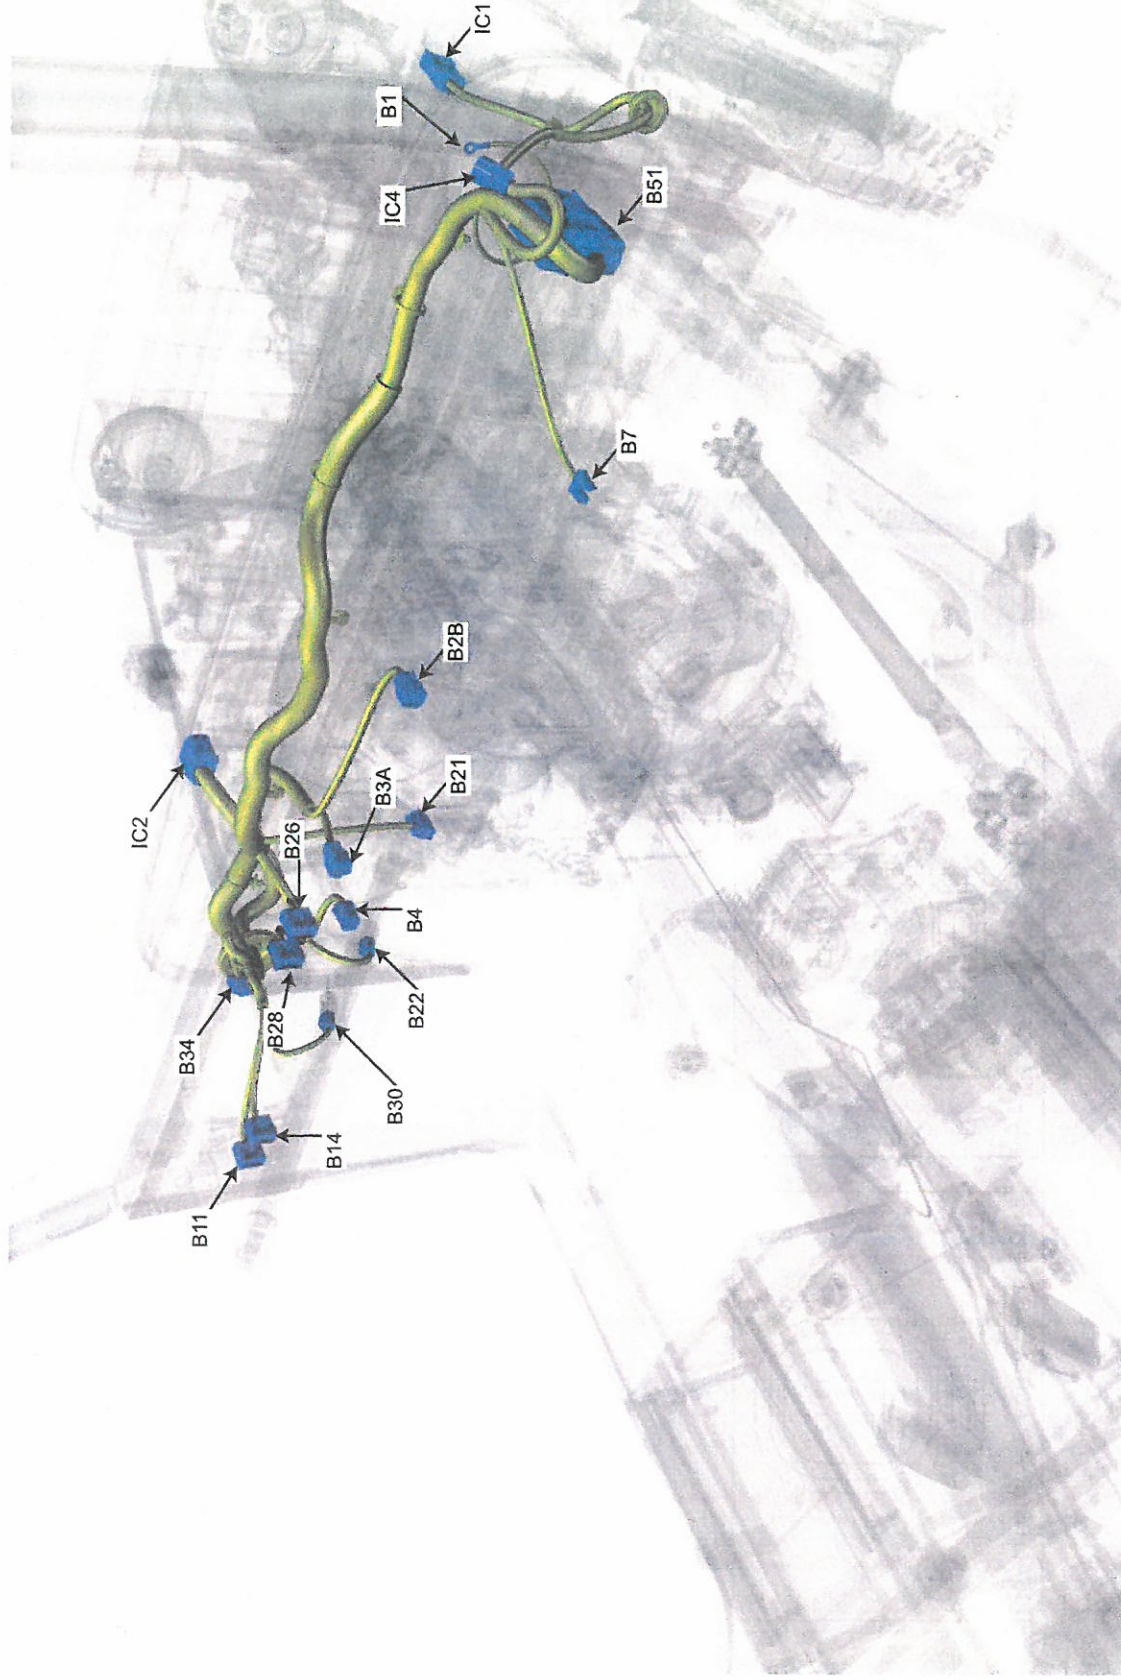

The repair methods given by the manufacturer in this document are based on the technical specifications, current at the time of release. The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which the vehicles are manufactured. The reproduction, translation, transmission, in part or of whole of the present document, are prohibited without the prior written consent of Mahindra & Mahindra Ltd. The use of this document by any person other than the trained personnel, at the Authorized Service Centre of Mahindra & Mahindra Ltd., will amount to unauthorized use and shall be liable for penalty/prosecution © 2013 Mahindra & Mahindra Ltd.



6.2.1 INSTRUMENT PANEL WIRING HARNESS CONNECTOR LIST





CONNECTOR NO.	DESCRIPTION	HARNESS	POLE	TYPE
B1	GROUND EYELET	IP	-	TER
B2B	CLUSTER B	IP	8	C
B3A	CLUSTER A	IP	8	C
B4	KEY SWITCH	IP	6	C
B7	12V POWER POINT	IP	2	C
B11	SIDE REAR LED LIGHT SWITCH	IP	10	C
B14	LEAD LIGHT BAR SWITCH	IP	10	C
B21	ACCELERATOR PEDAL MODULE	IP	6	C
B22	BRAKE SWITCH	IP	4	C
B26	HORN SWITCH	IP	10	C
B28	HI LO BEAM SELECT SWITCH	IP	10	C
B30	CLUTCH SWITCH	IP	4	C
B34	DIAGNOSTIC CONNECTOR	IP	6	C
B51	IP PDC	IP	34	C
IC1	ENGINE TO BODY	IP	10	IC







IC2	ENGINE TO BODY	IP	34	IC
IC4	ROPS ACCESSORIES BODY SIDE	IP	6	IC
C - CONNECTOR, IC - INTER CONNECTOR, TER - TERMINAL				







### 6.2.2 INSTRUMENT PANEL WIRING HARNESS CONNECTOR LOCATION VIEW

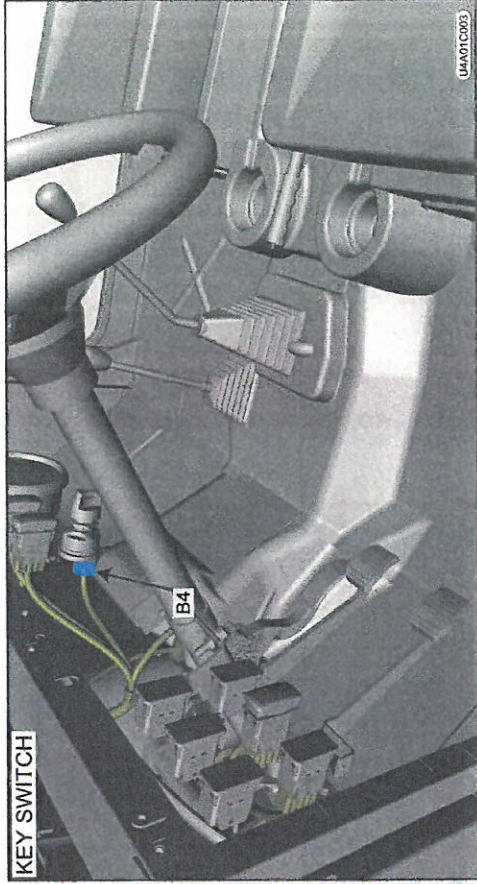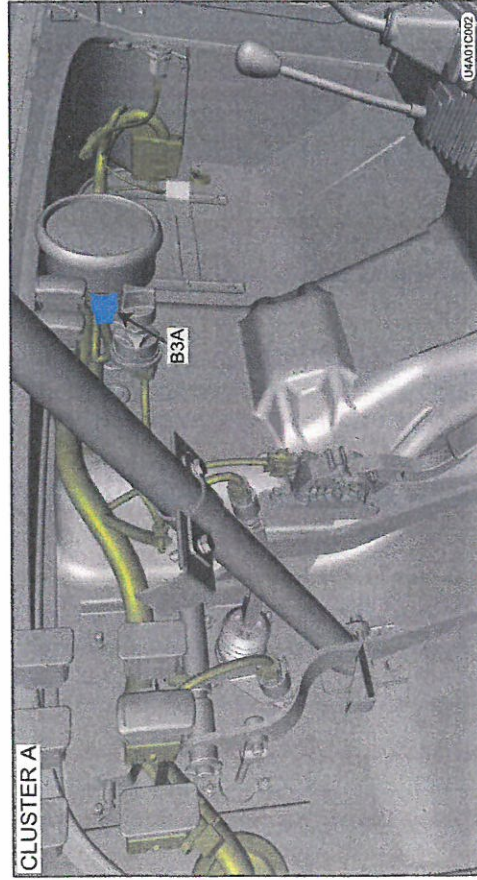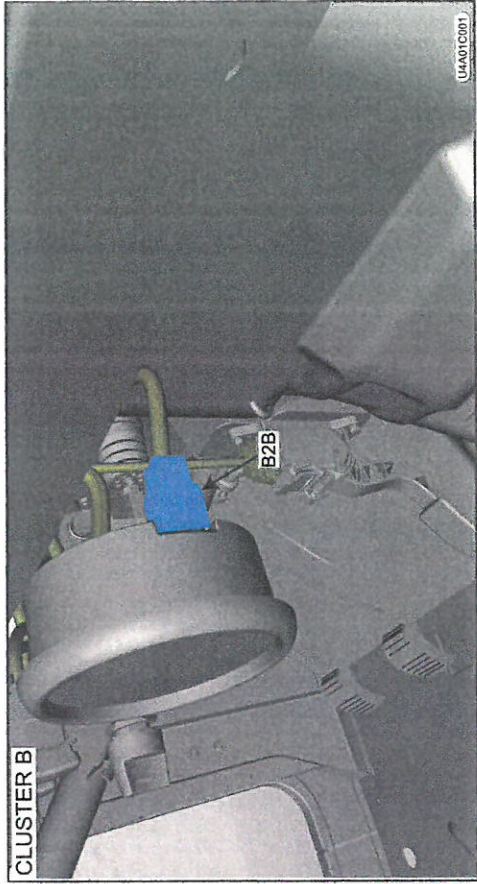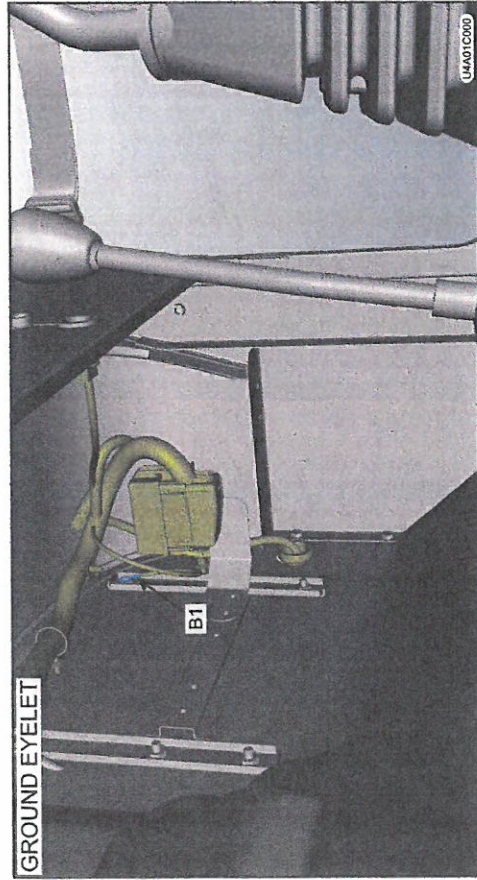







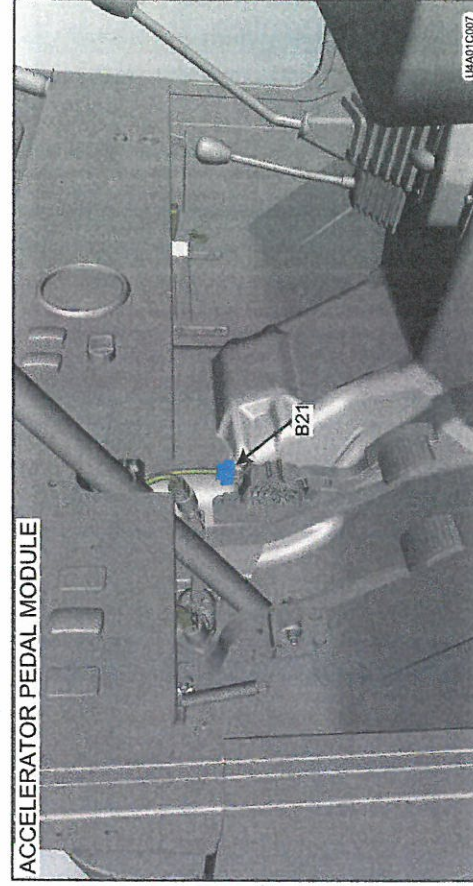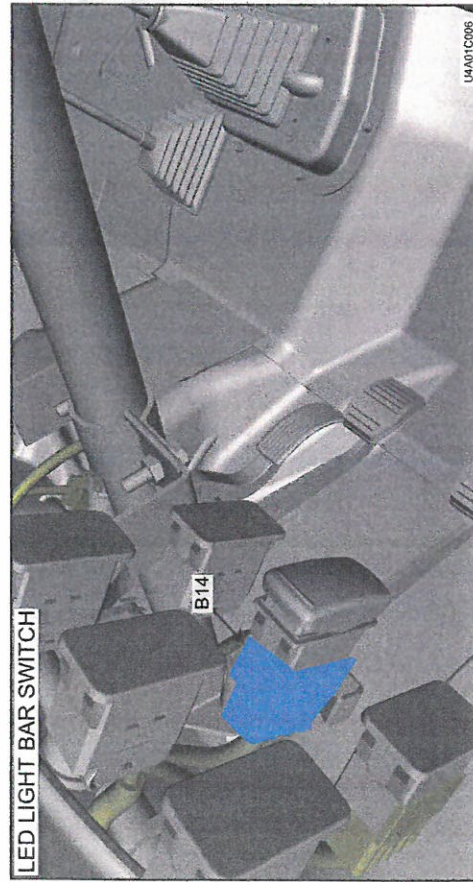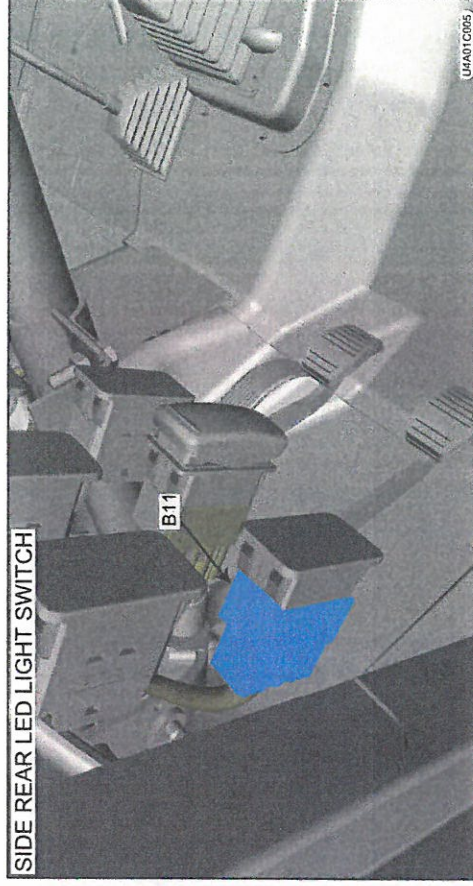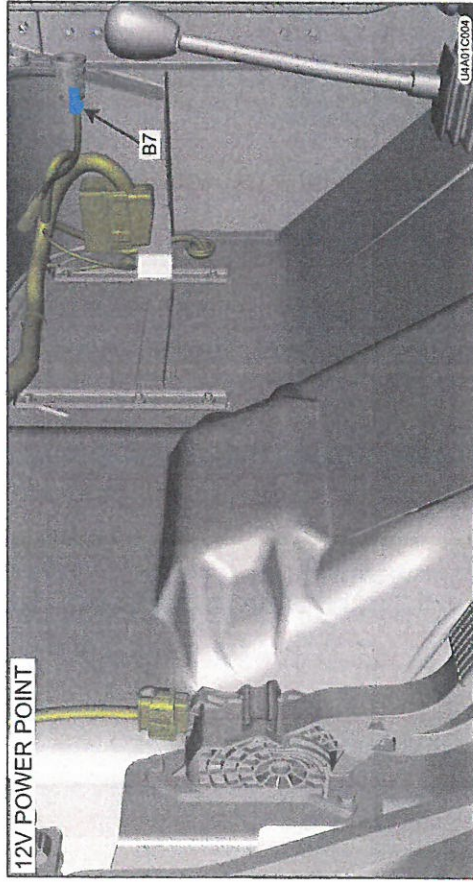




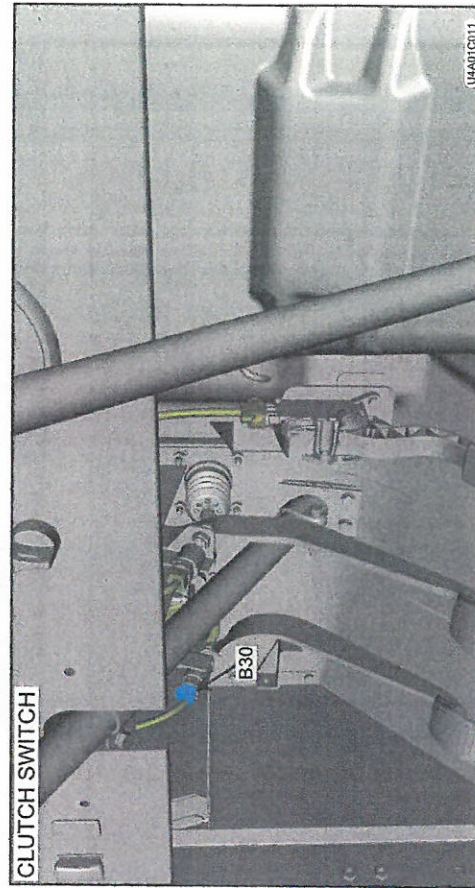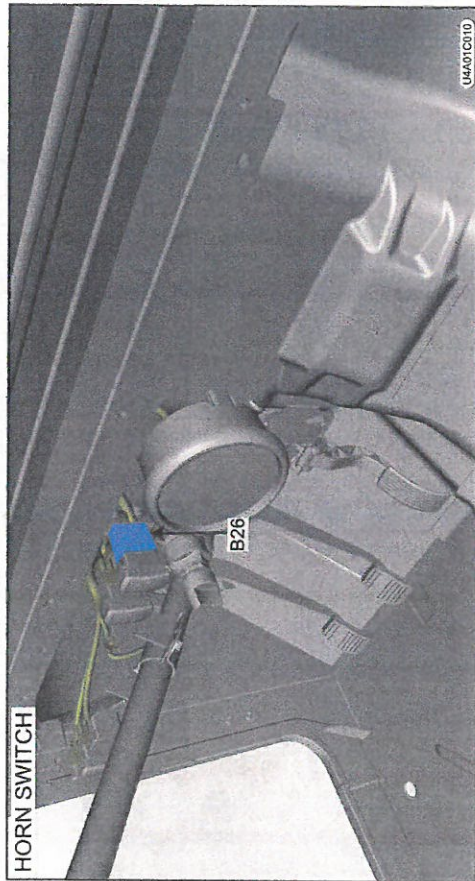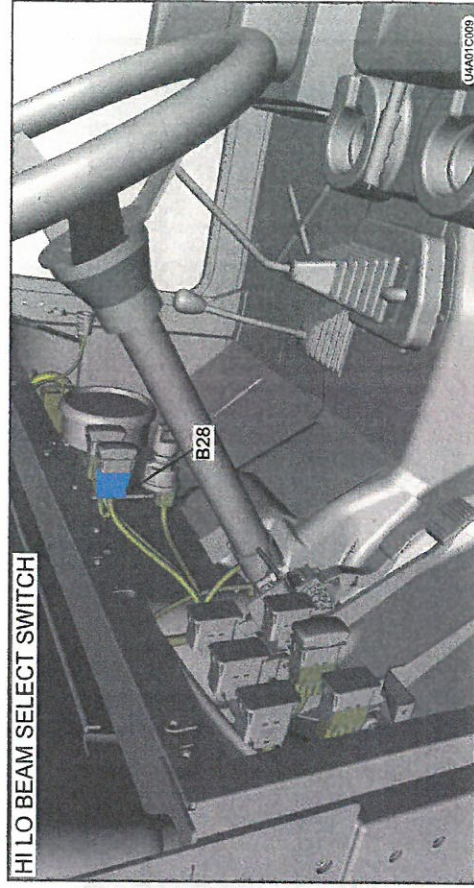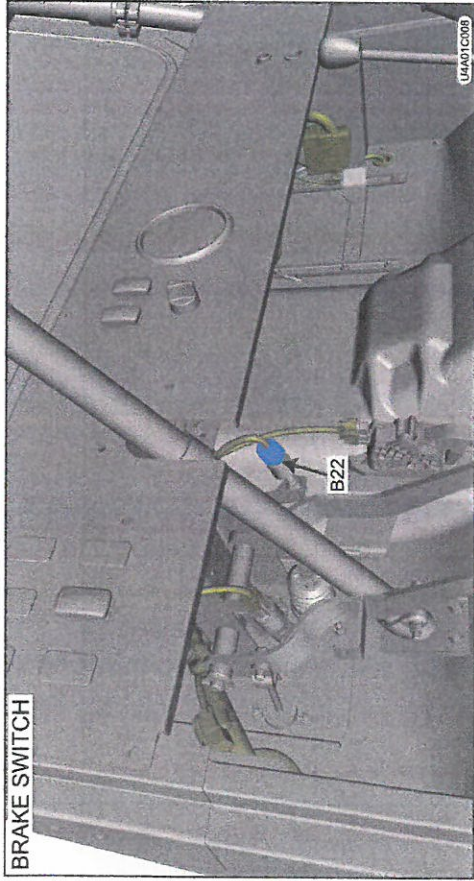











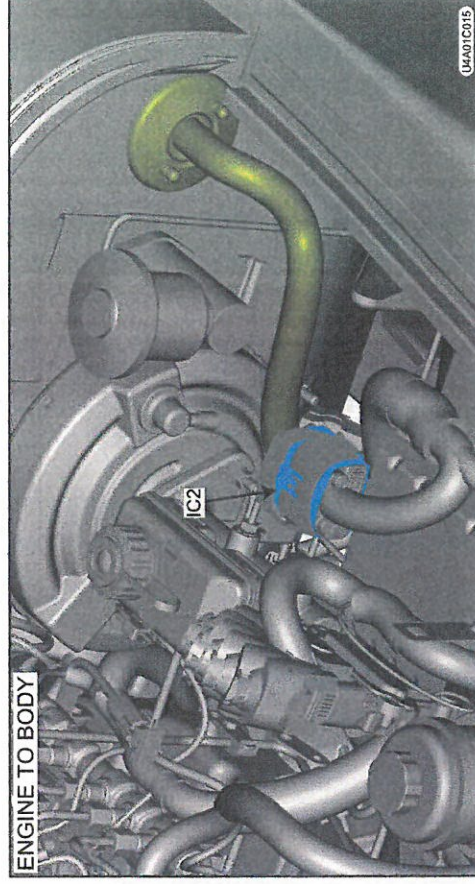
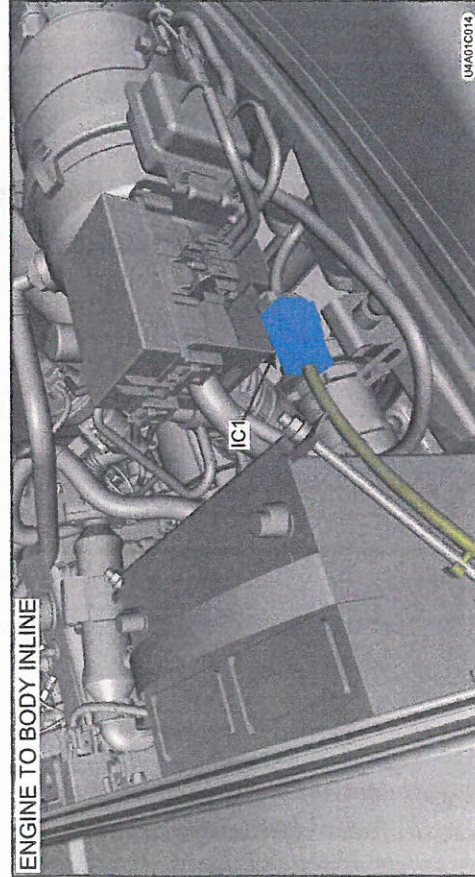
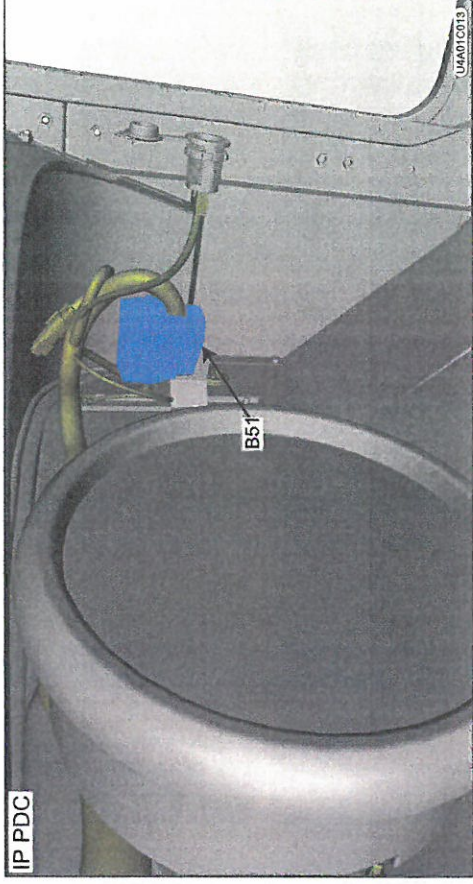
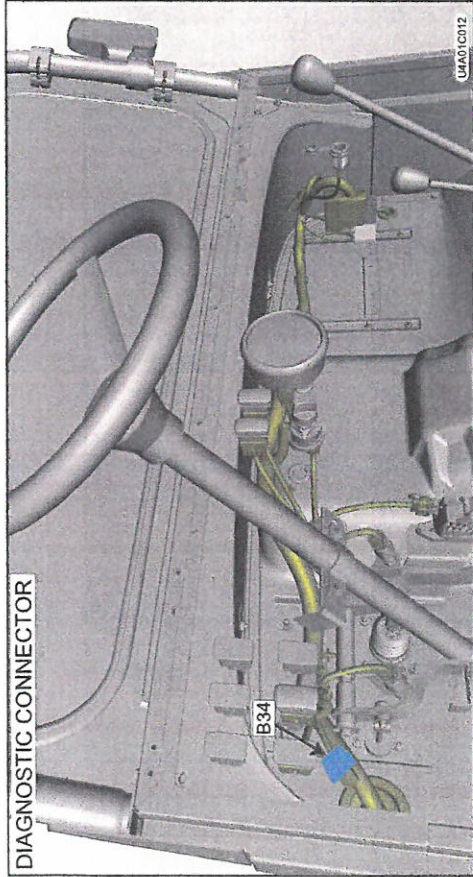




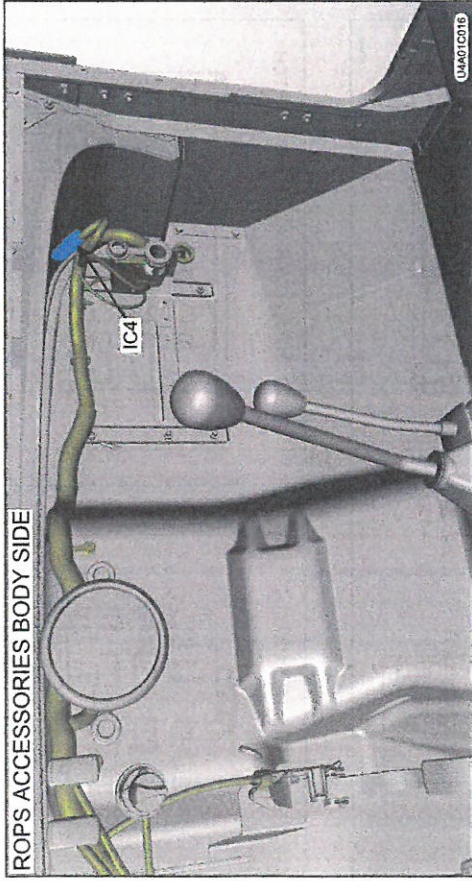



**6.2.3 INSTRUMENT PANEL WIRING HARNESS CONNECTOR FACE VIEW**

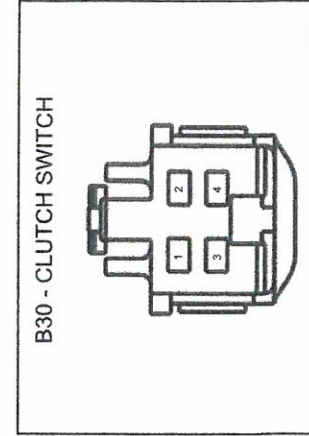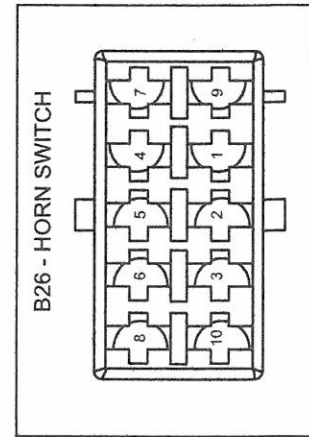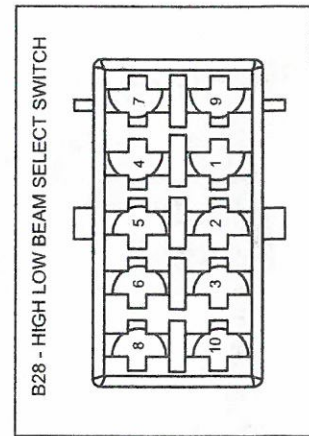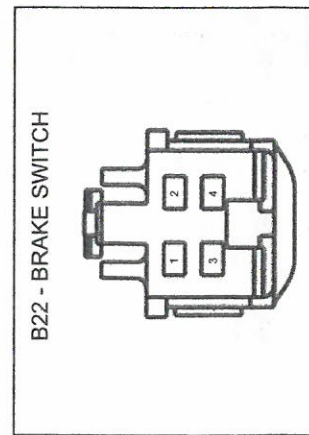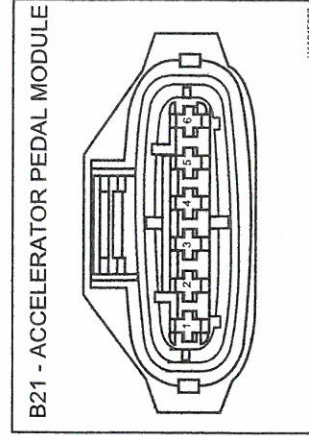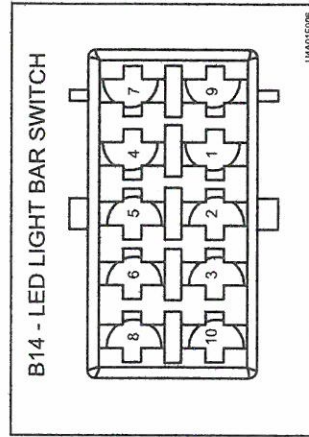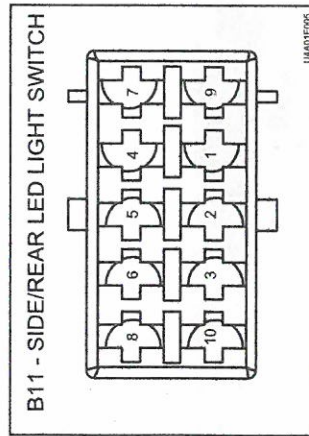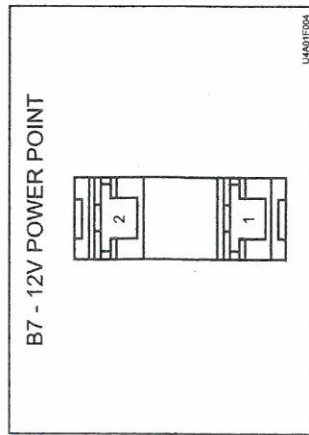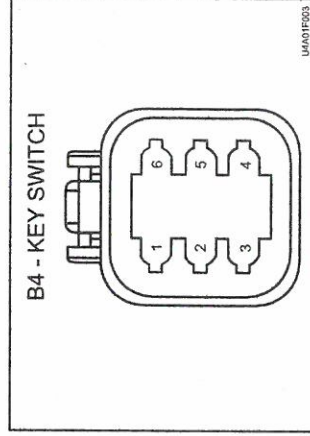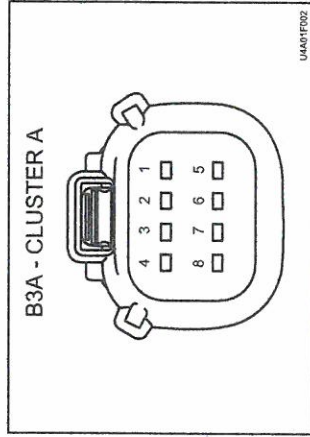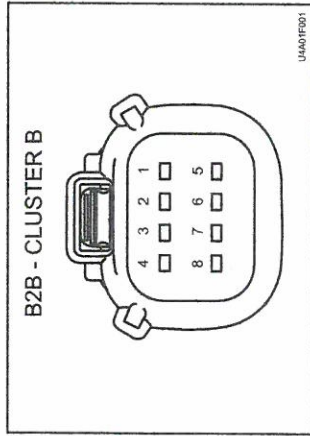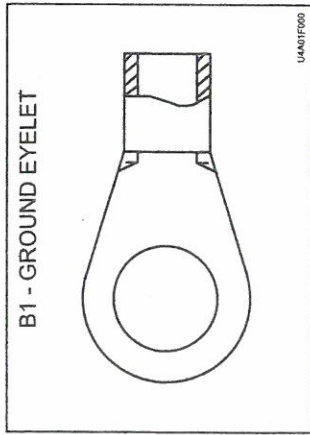

The repair methods given by the manufacturer in this document are based on the technical specifications, current at the time of release. The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which the vehicles are manufactured. The reproduction, translation, transmission, in part or of whole of the present document, are prohibited without the prior written consent of Mahindra & Mahindra Ltd. The use of this document by any person other than the trained personnel, at the Authorized Service Centre of Mahindra & Mahindra Ltd., will amount to unauthorized use and shall be liable for penalty/prosecution © 2018 Mahindra & Mahindra Ltd.



